



Configuration Matters

Chandler or 'V' type pleat will blind quicker, lose surface area. Rapid increase in pressure drop.

Uniform radial style pleat loads more evenly, using more available surface area. Lower average pressure drop and long loading curve.

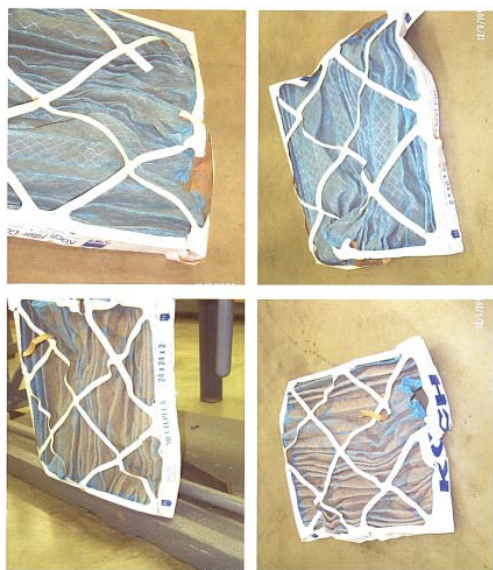

Under utilized

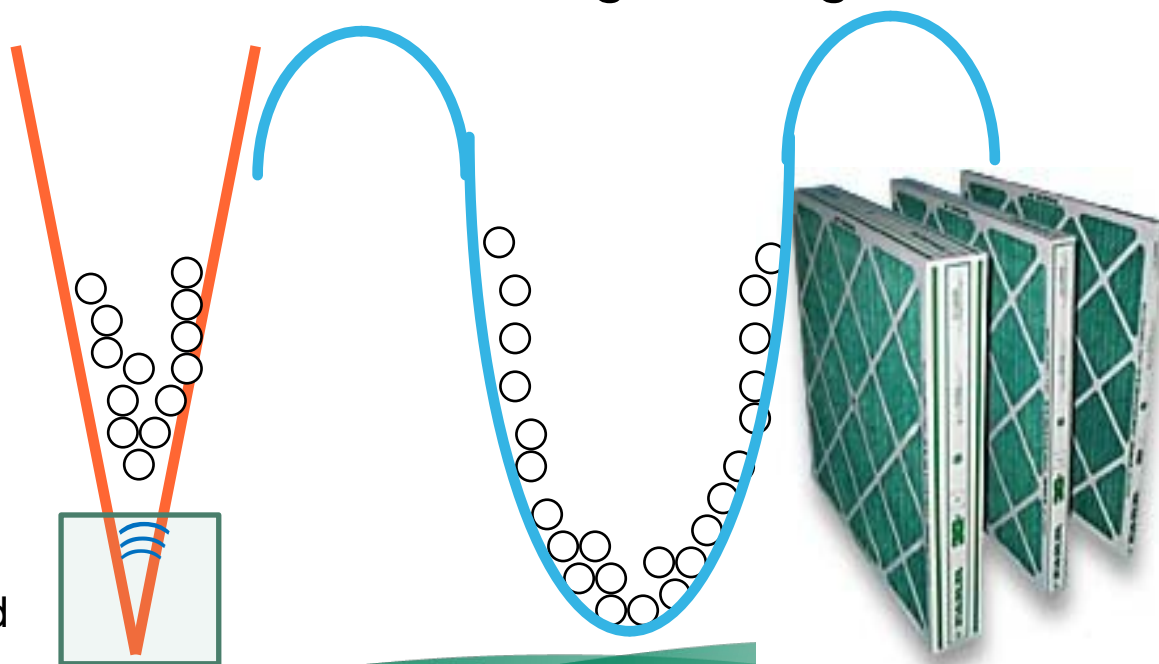

High Loft Media for Longer Life and Lower DP

